

ROMA





 
Talerz głęboki
Plate deep
Teller tief
ø285 mm (nr 2138)



Talerz płytki
Plate flat
Teller flach
ø305 mm (nr 2143)
ø270 mm (nr 2038)
ø260 mm (nr 2036)
ø240 mm (nr 2034)
ø210 mm (nr 2031)
ø190 mm (nr 2030)
ø170 mm (nr 2128)



Filiżanka wysoka ze spodkiem
Cup tall and saucer
Tasse hoch mit Untertasse
0,25 l/ø155 mm (nr 1606, 2315)

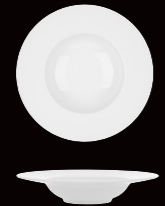

Talerz głęboki
Plate deep
Teller tief
0,35 l, ø275 mm (nr 2134)



Talerz płytki
Plate flat
Teller flach
ø290 mm (nr 2133)
ø280 mm (nr 2136)
ø230 mm (nr 2130)
ø160 mm (nr 2028)



Filiżanka ze spodkiem
Cup and saucer
Tasse mit Untertasse
0,19 l/ø145 mm (nr 2007, 2013)



Talerz głęboki
Plate deep
Teller tief
0,40 l, ø240 mm (nr 4124)



 
Półmis okrągły
Round dish
Platte rund
ø320 mm (nr 2069)



Filiżanka ze spodkiem
Cup and saucer
Tasse mit Untertasse
0,10 l/ø140 mm (nr 2070, 2012)



Taca
Tray
Stollenplatte
350 mm (nr 2099)

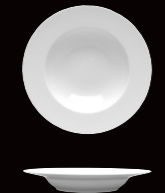

Talerz głęboki
Plate deep
Teller tief
ø235 mm (nr 2121)
ø225 mm (nr 2019)



Półmis owalny
Oval dish
Platte oval
360 mm (nr 2162)
320 mm (nr 2160)
280 mm (nr 2157)



Kieliszek do jaj
Egg cup
Eierbecher
(nr 2187)



Talerz głęboki
Plate deep
Teller tief
0,80 l, ø220 mm (nr 2125)
0,50 l, ø195 mm (nr 2120)
0,50 l, ø180 mm (nr 2118)



Rawier
Pickle dish
Beilageplatte
240 mm (nr 2108)



Solniczka
Salt shaker
Salzstreuer
0,06 l (nr 2185)



Talerz głęboki do deseru
Plate deep for dessert
Dessert-Teller
0,20 l, ø270 mm (nr 2135)



Salaterka
Salad bowl
Salatschüssel
1,60 l, ø260 mm (nr 2026)
ø230 mm (nr 2123)
0,55 l, ø185 mm (nr 2018)
ø160 mm (nr 2025)
ø140 mm (nr 2115)



Pieprzniczka
Pepper shaker
Pfefferstreuer
0,06 l (nr 2186)